

# AIRPORT DIAGRAM

BIRMINGHAM-SHUTTLESWORTH INTL (BHM)  
AL-50 (FAA) BIRMINGHAM, ALABAMA


ATIS  
119.4 270.1  
BIRMINGHAM TOWER  
119.9 317.725  
GND CON  
121.7 348.6  
CLNC DEL  
125.675 305.2



33°35'N  
VAR 3°2' W  
JANUARY 2015  
ANNUAL RATE OF CHANGE  
0.1° W

RWY 06-24  
PCN 65 F/C/X/T  
S-175, D-205, 2S-175, 2D-350  
RWY 18-36  
PCN 45 F/C/X/T  
S-75, D-170, 2S-175, 2D-240

FIELD  
ELEV  
650

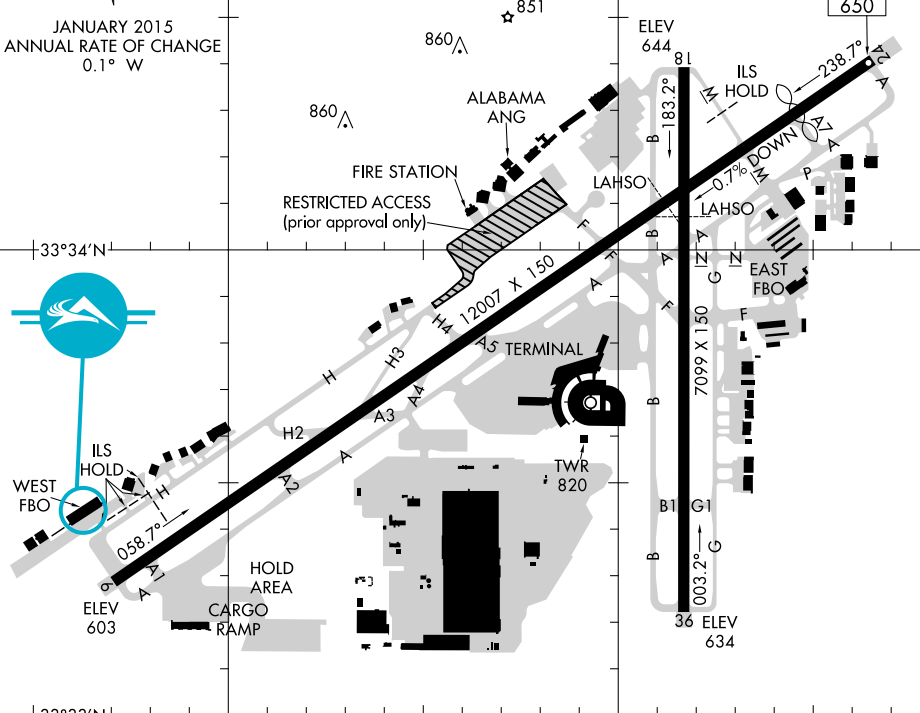

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.  
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

86°46'W 86°45'W

# AIRPORT DIAGRAM

BIRMINGHAM, ALABAMA  
BIRMINGHAM-SHUTTLESWORTH INTL (BHM)